

PD-8 ECO



Diagram illustrating the DALI interface connection:

- The **DALI APPLICATION CONTROLLER** is connected to the **DALI** interface.
- The **DA +** terminal of the controller is connected to the **+** terminal of the DALI interface.
- The **DA -** terminal of the controller is connected to the **-** terminal of the DALI interface.