

PD-8 ECO



Diagram illustrating the DALI interface connection:

- The **DALI APPLICATION CONTROLLER** is connected to the **DALI** interface.
- The **DALI** interface has two main inputs: **+** and **-**.
- The **+** input is connected to the **DA +** terminal of the DALI APPLICATION CONTROLLER.
- The **-** input is connected to the **DA -** terminal of the DALI APPLICATION CONTROLLER.